




LINEO

concrete installation



# MOUNTING THE RECESSED BOX


# MOUNTING THE RECESSED BOX

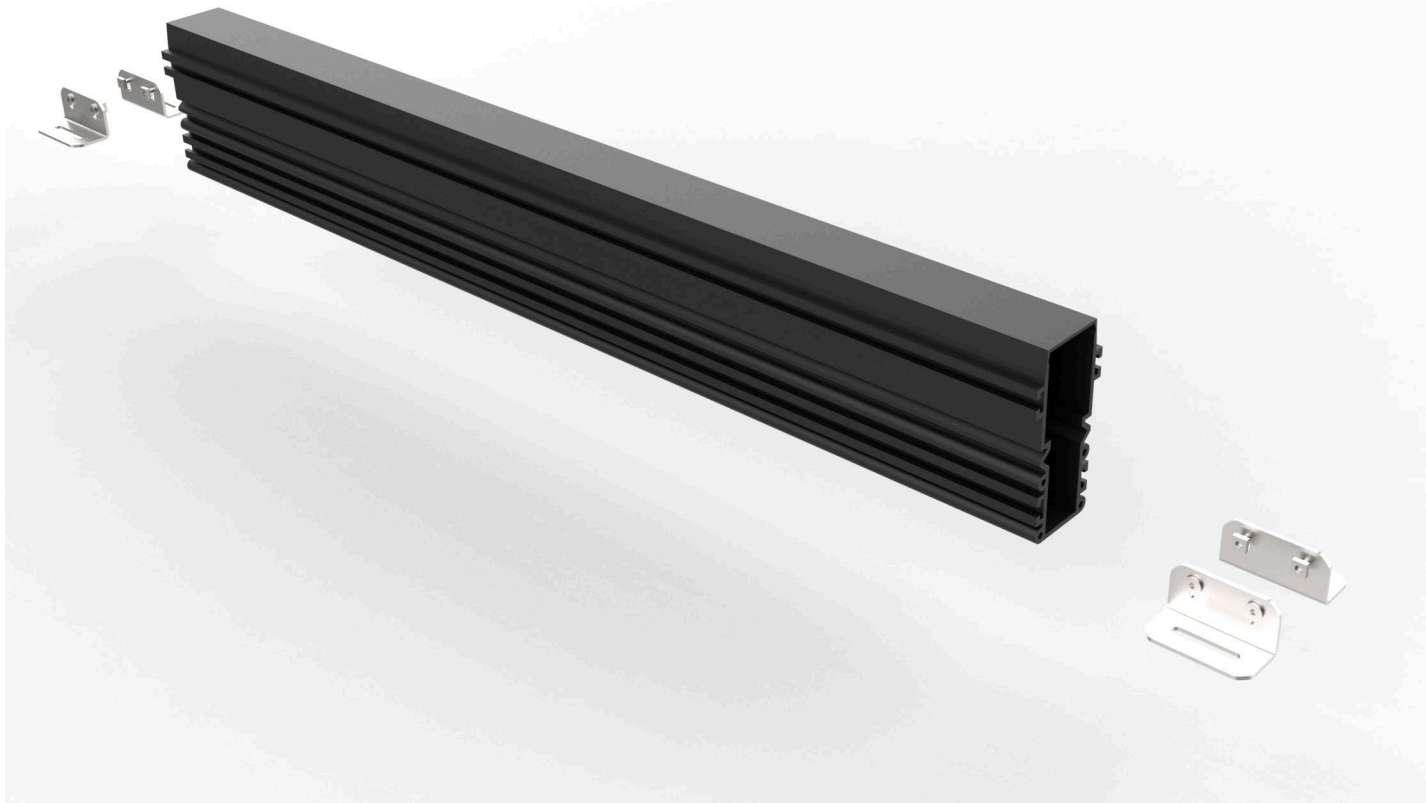

Place the recessed box.

Inserting the fixing brackets on the ground laterally.

Code: **LNEZZZ024**

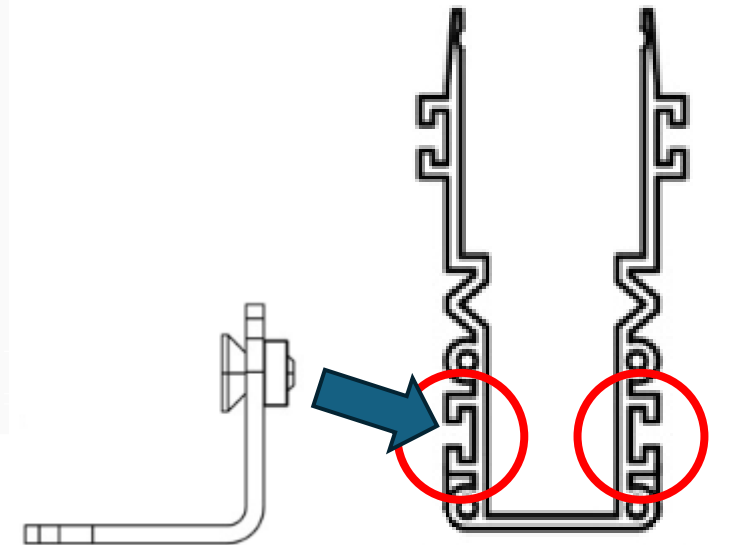



# MOUNTING THE RECESSED BOX



It is not mandatory to use 4 supports for each box.

You can use 2 alternately across the box.

# MOUNTING THE RECESSED BOX

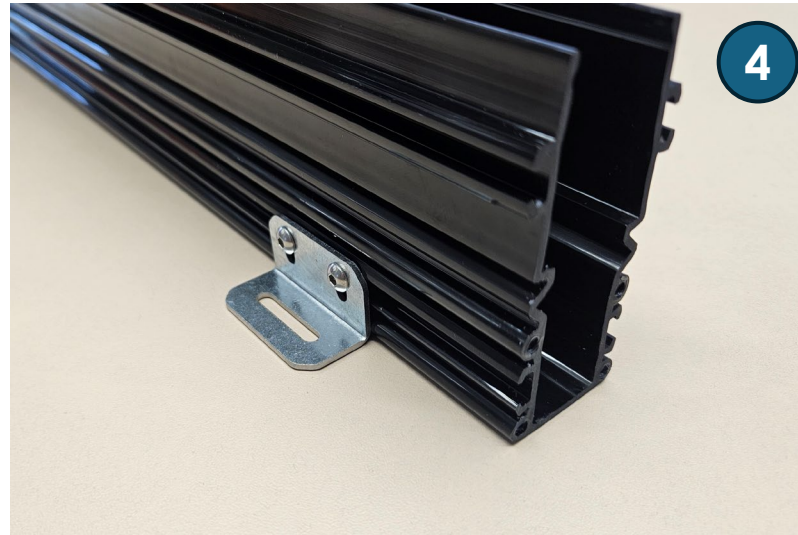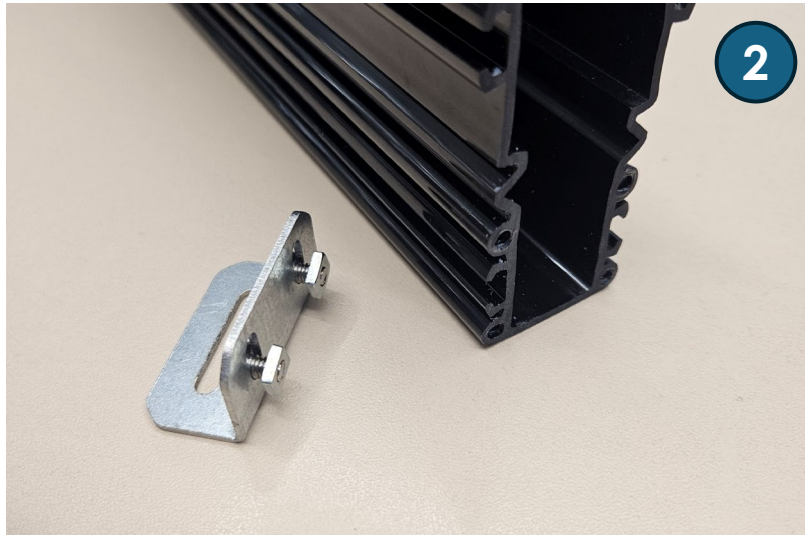

It is not mandatory to use 4 supports for each box.

You can use 2 alternately across the box.

# MOUNTING THE RECESSED BOX



Using a drill, pre-drill the caps, at the entry point of the corrugated tube.

**The pre-drilled hole is 20 mm.  
It is strongly recommended to use  
corrugated tubes of this diameter.**

Otherwise, use a hole of the size corresponding to the available corrugated tube.





# MOUNTING THE RECESSED BOX



Once the caps are drilled,  
mount them on the boxes.

Using the screws included  
in the package.

# MOUNTING THE RECESSED BOX

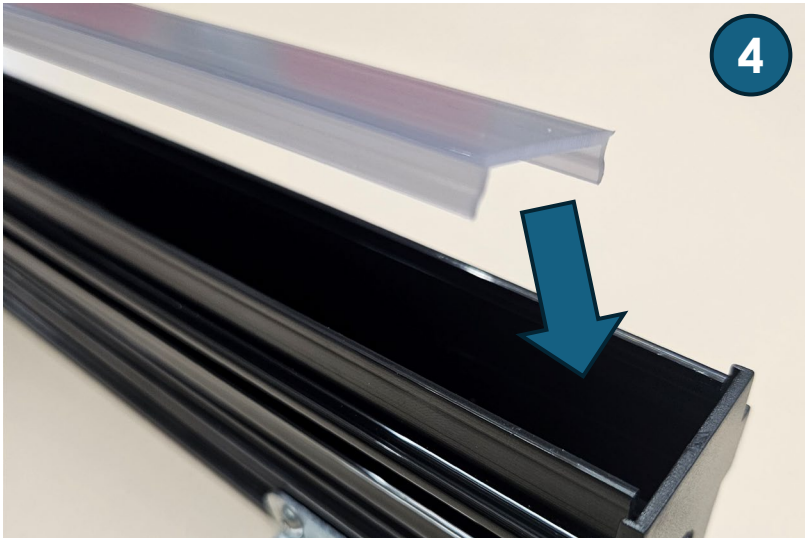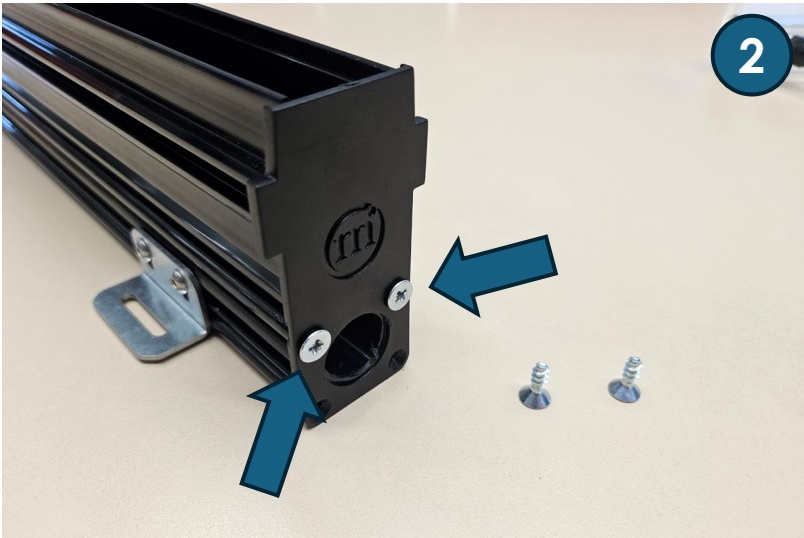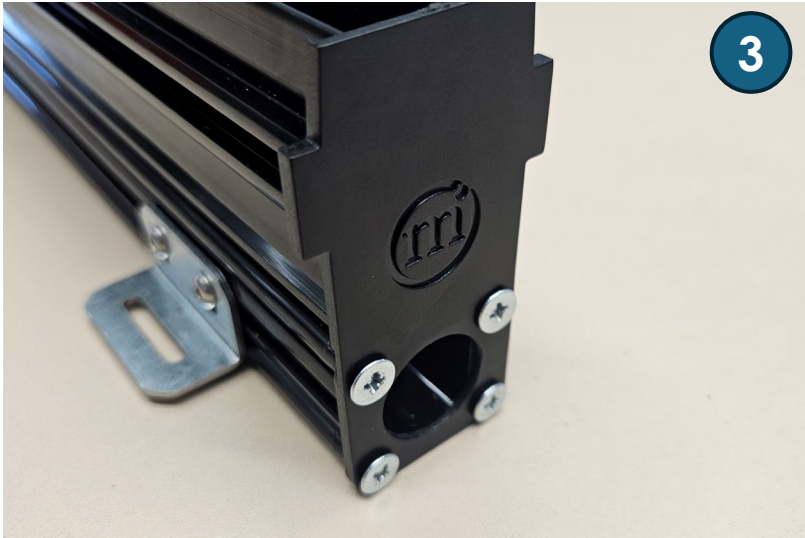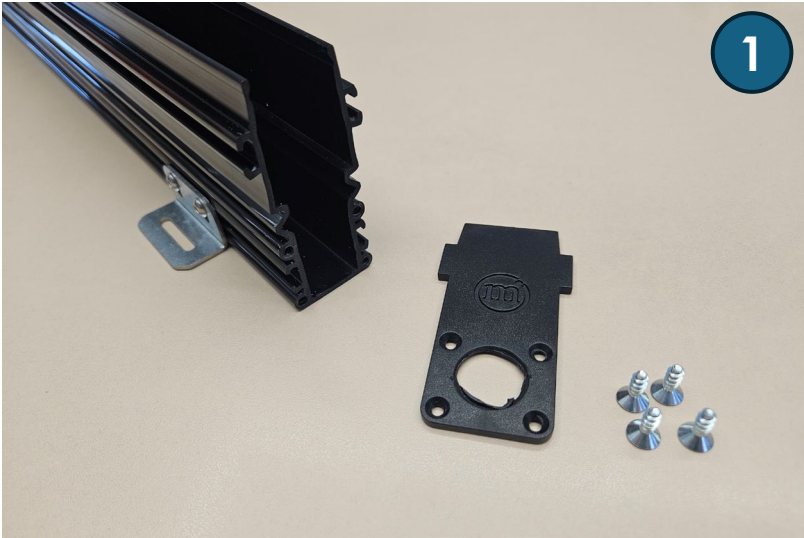



# FIXING TO THE GROUND

# FIXING TO THE GROUND



Place the wooden formwork.

Insert the corrugated tube so that there is sufficient length.

# FIXING TO THE GROUND




Pour the first layer of  
concrete

# FIXING TO THE GROUND




Dismantle the  
wooden formwork

# FIXING TO THE GROUND

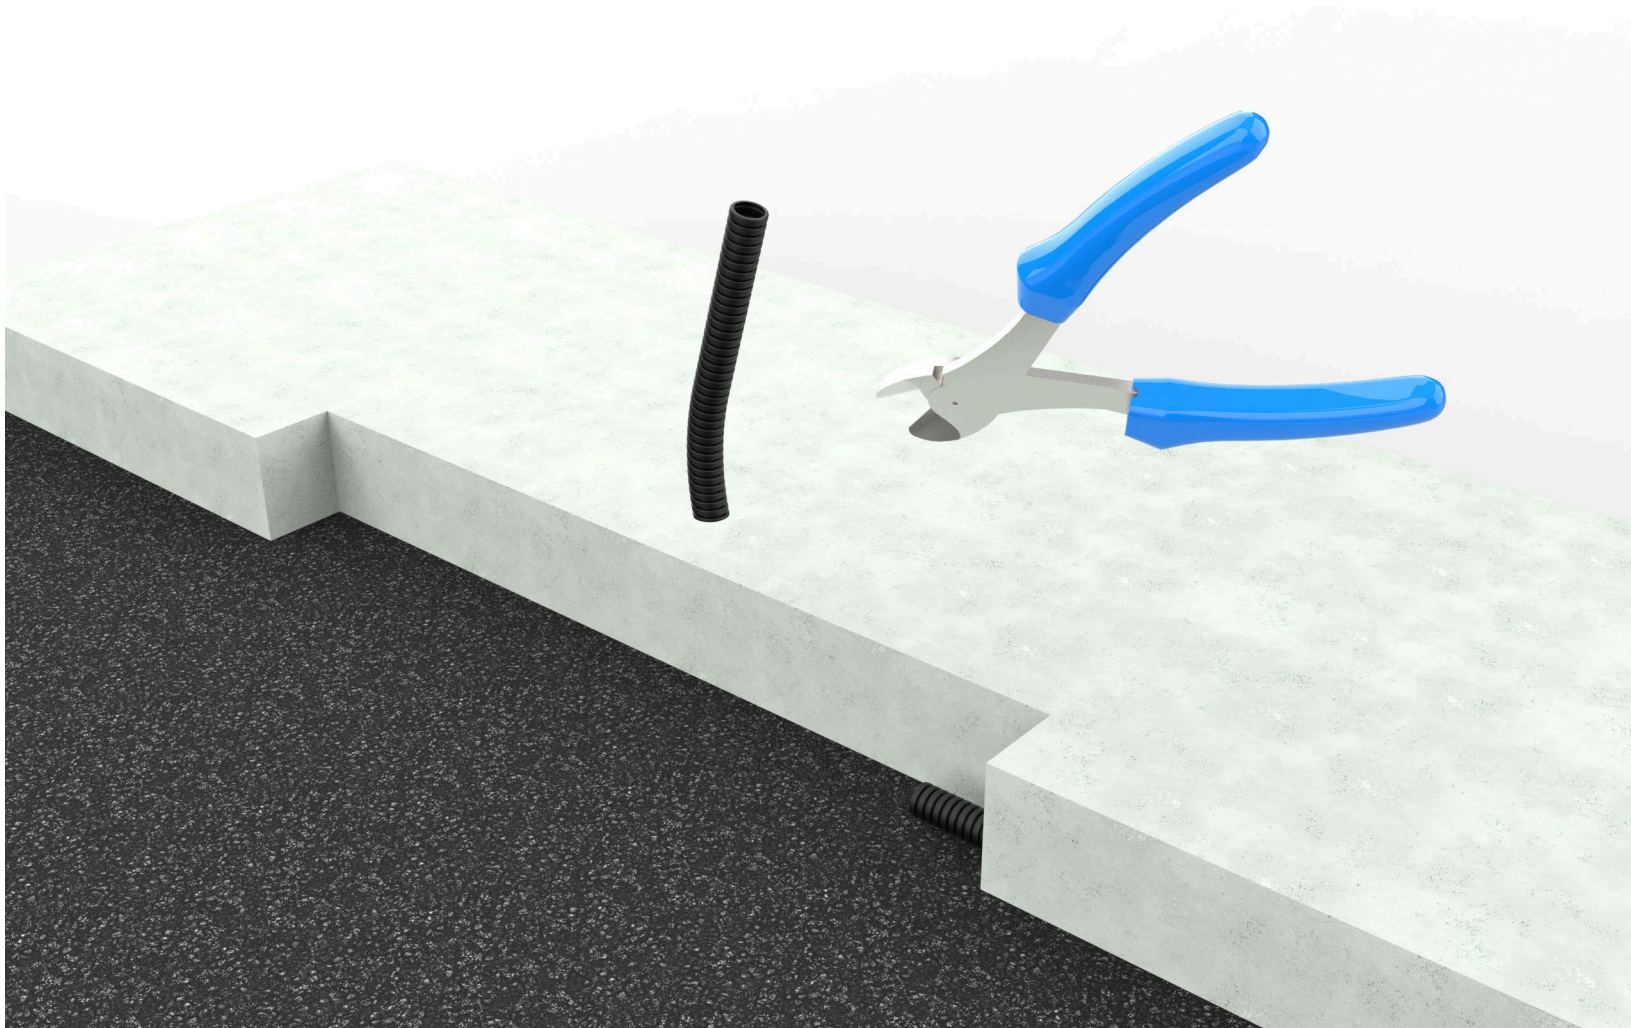


Cut off the excess  
length of the  
corrugated pipe

# FIXING TO THE GROUND

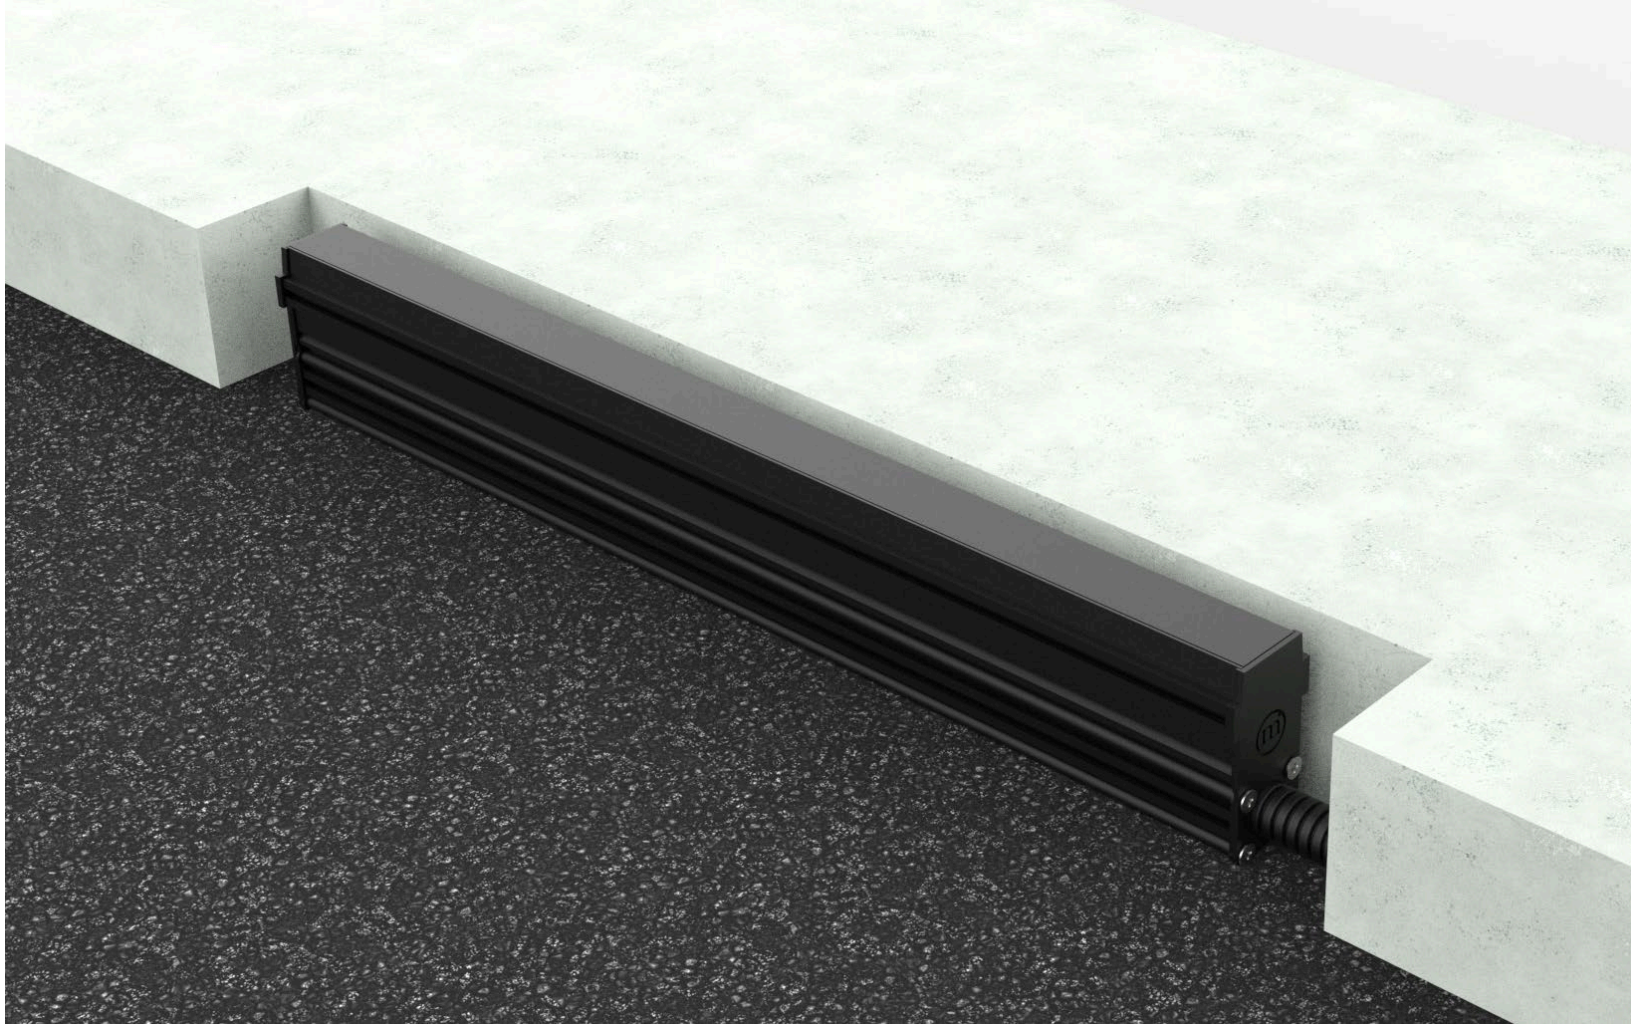


Insert the corrugated tube into the head of the box.

# FIXING TO THE GROUND

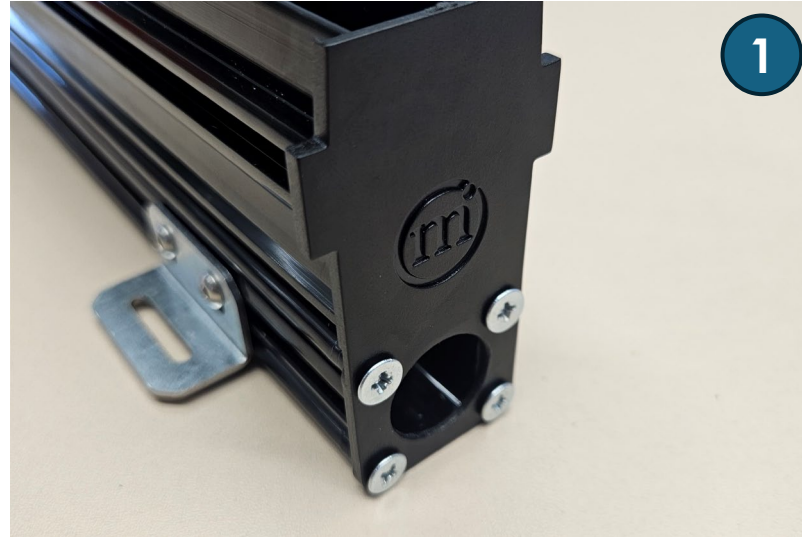

It is recommended to pre-position the cable with the connectors inside the corrugated tubes.


# FIXING TO THE GROUND

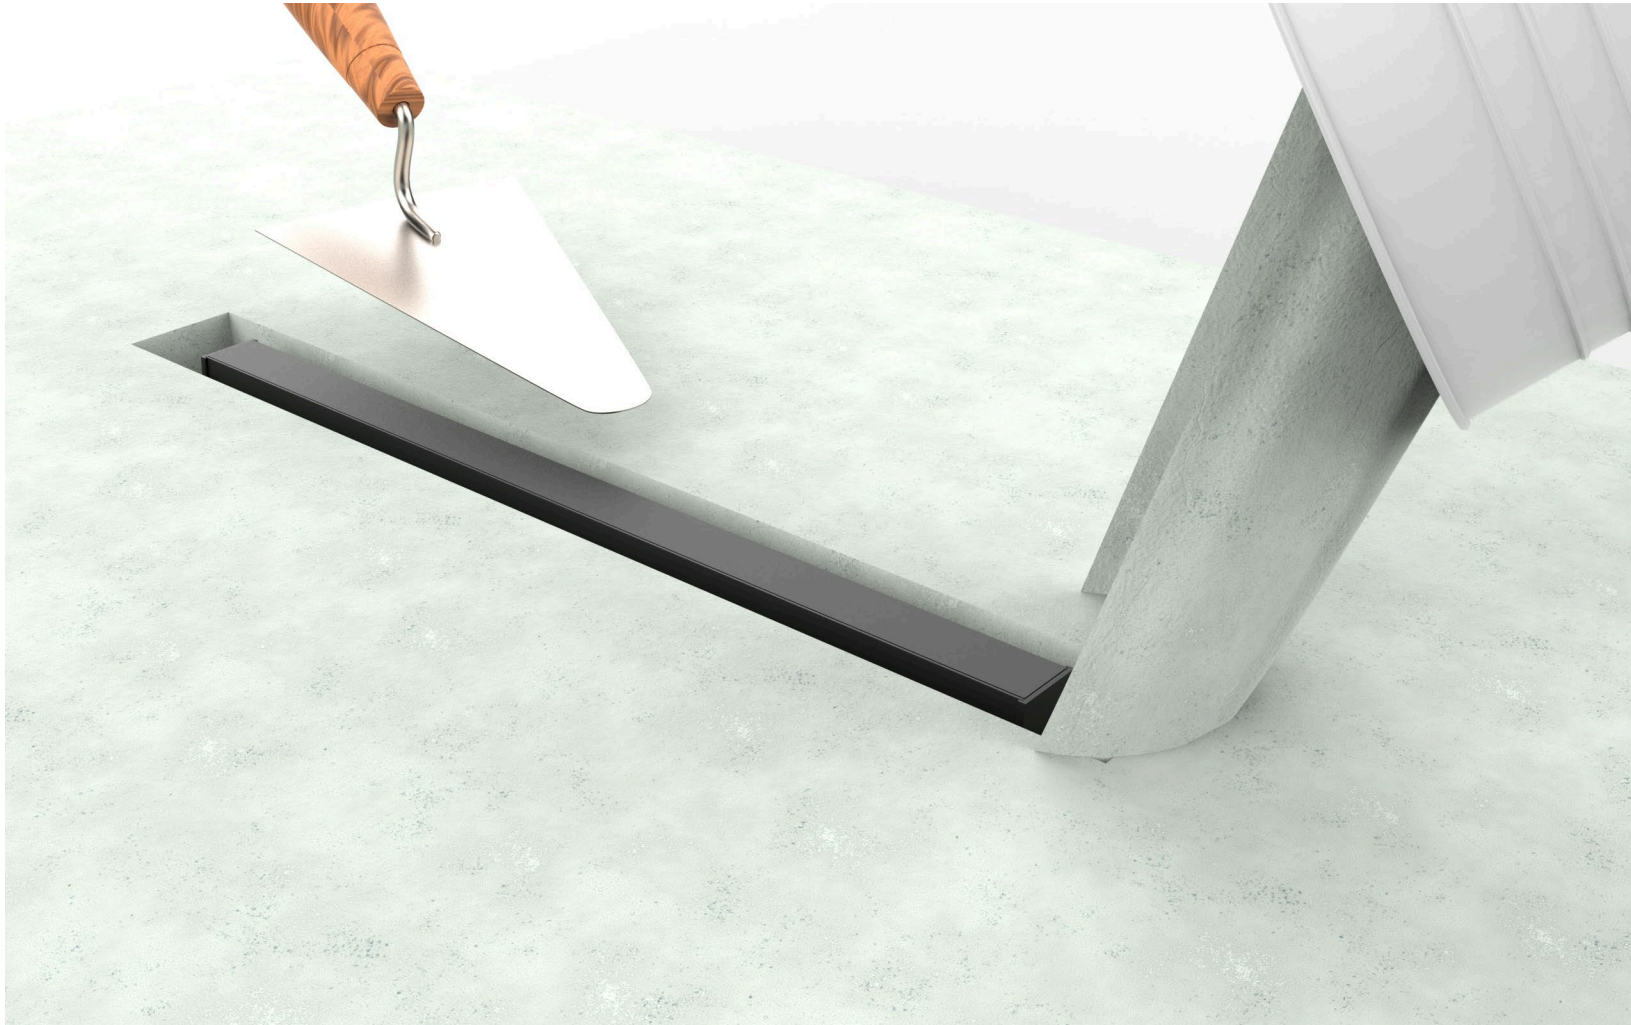

Pour the finishing concrete.


And smooth it with a trowel.

# FIXING TO THE GROUND

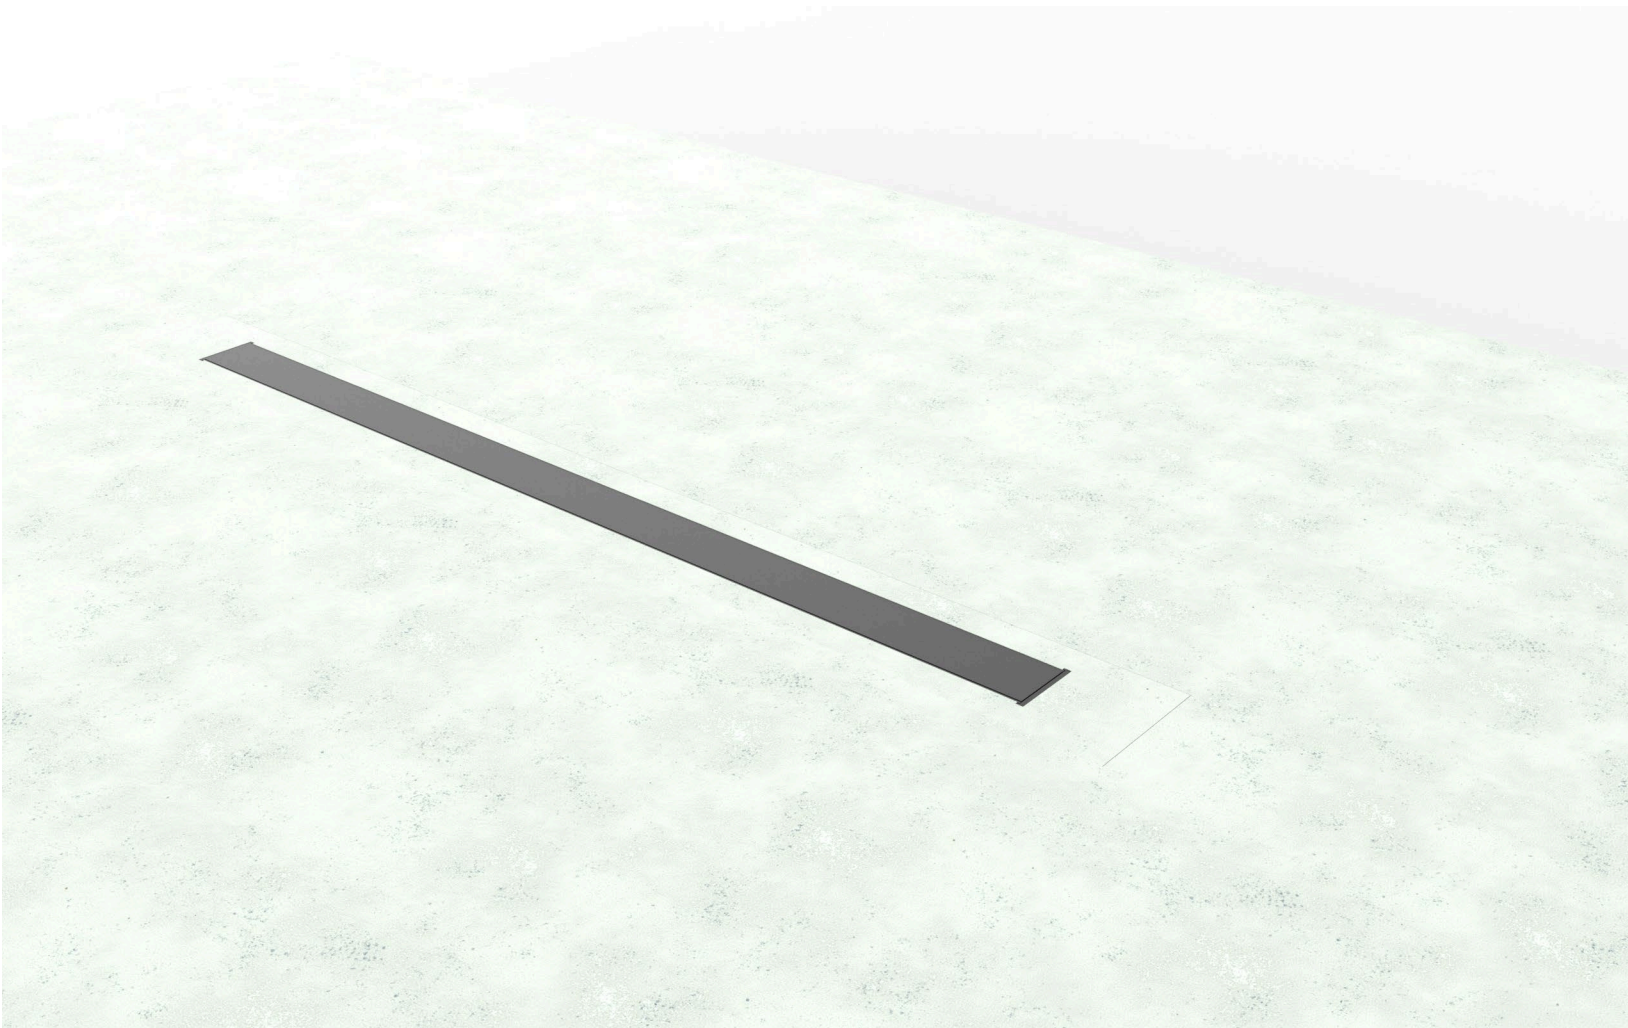

Make sure everything is level , using a spirit level.


# FIXING TO THE GROUND

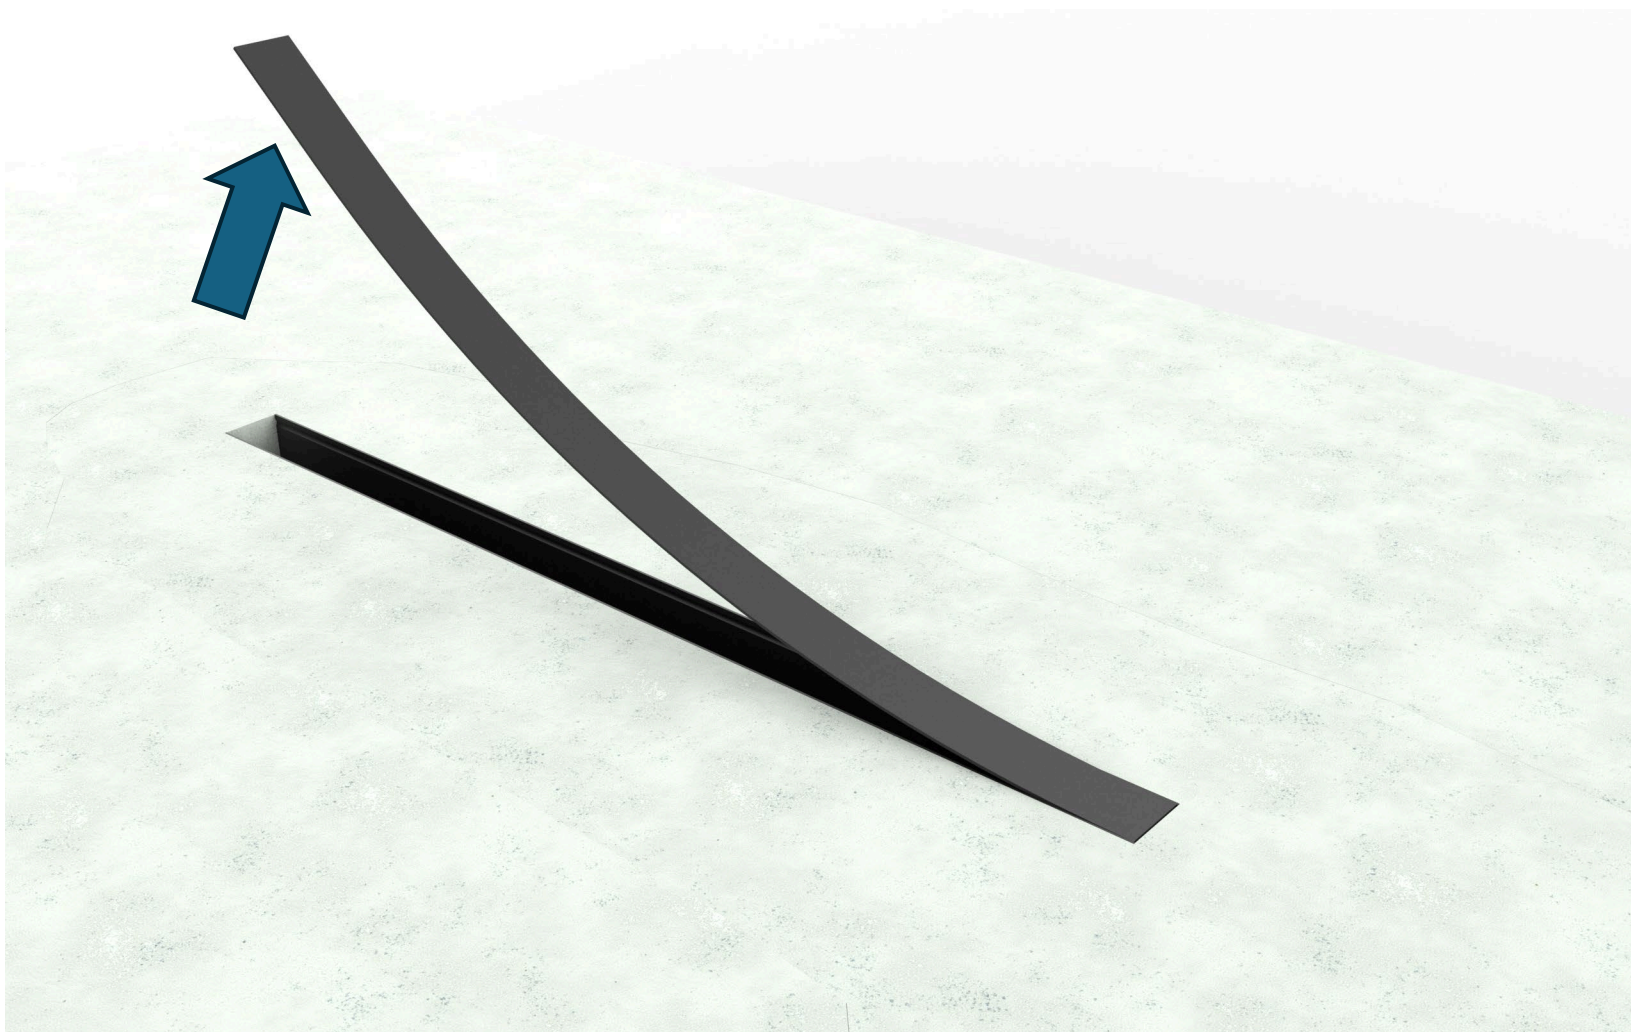

Once the concrete has dried, you can proceed to remove the protective cover from the box.

Using a flathead screwdriver or a knife.



# FIXING TO THE GROUND

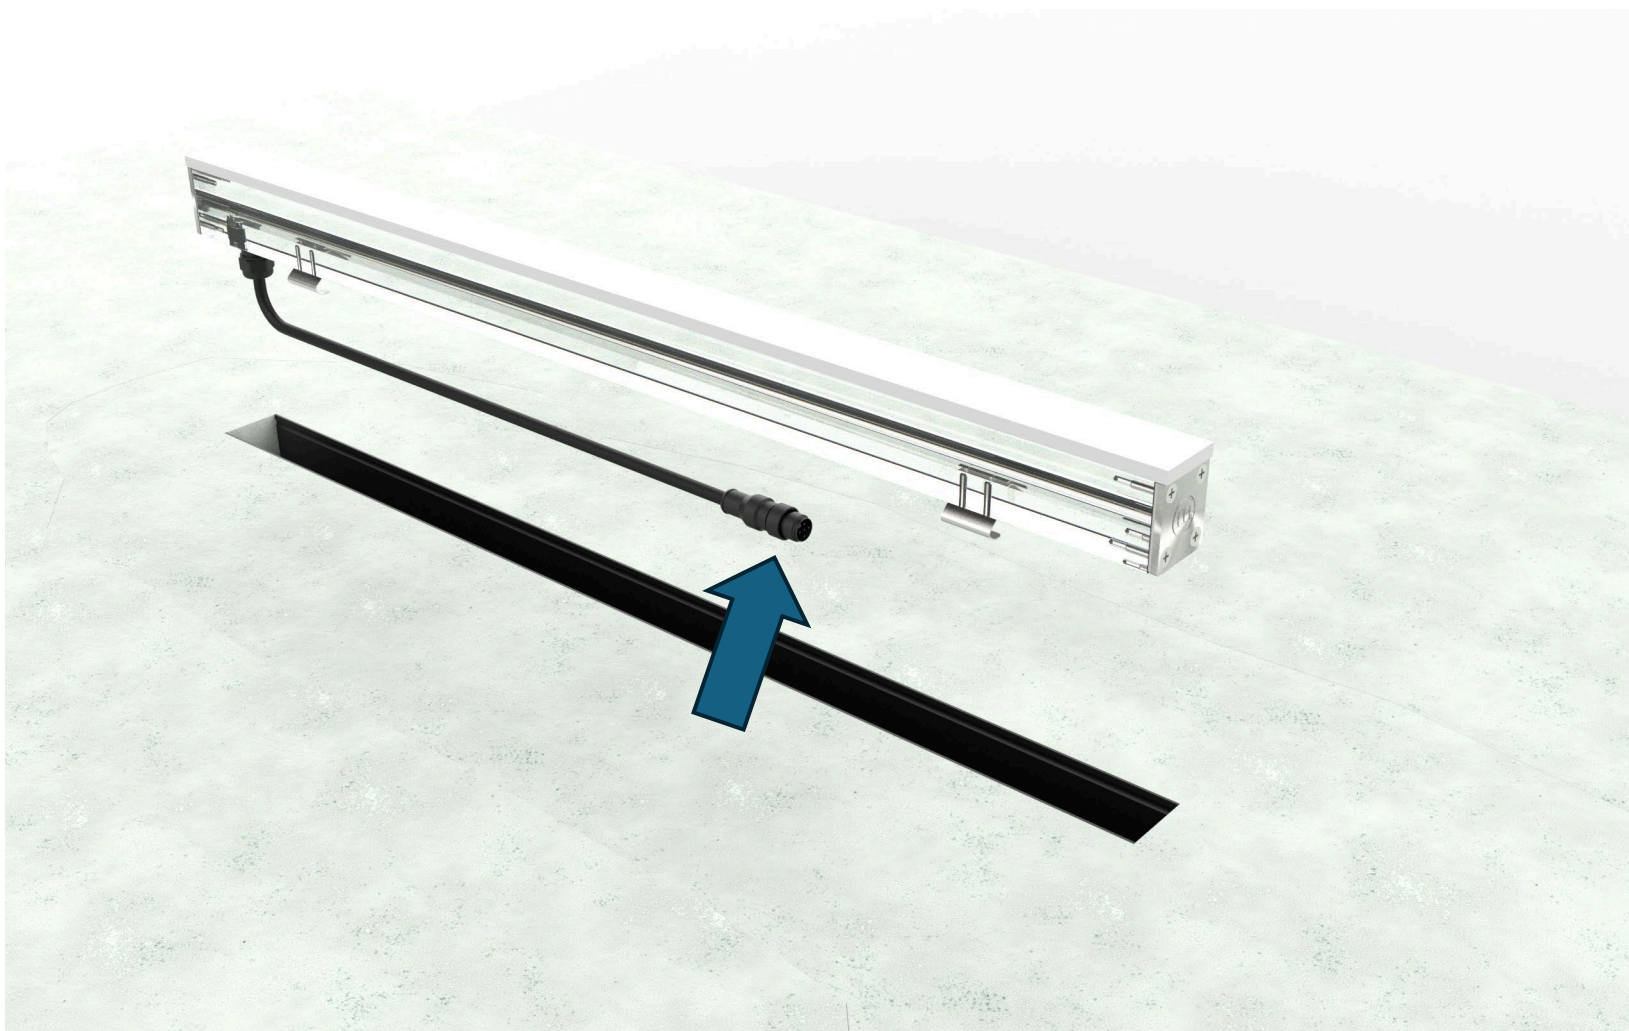


At this point, insert the lighting product into the box.

Connect the product, using the quick connector, to the extension cable already present in the corrugated tube.


# FIXING TO THE GROUND

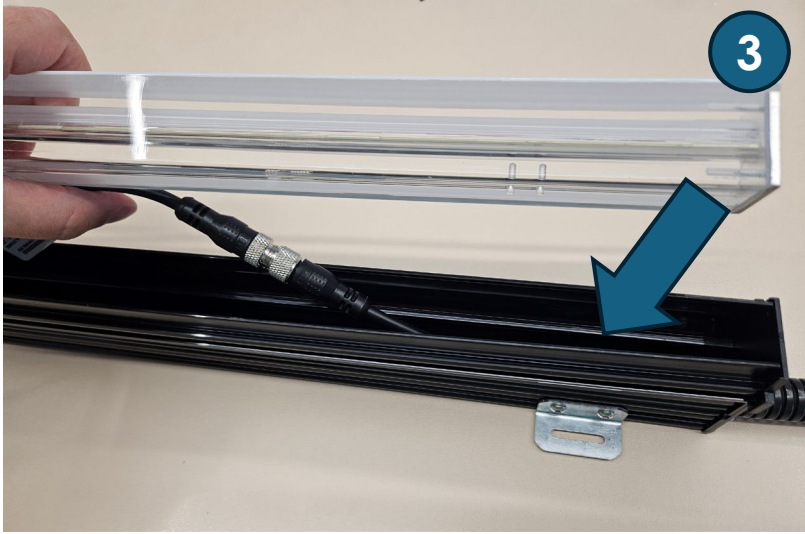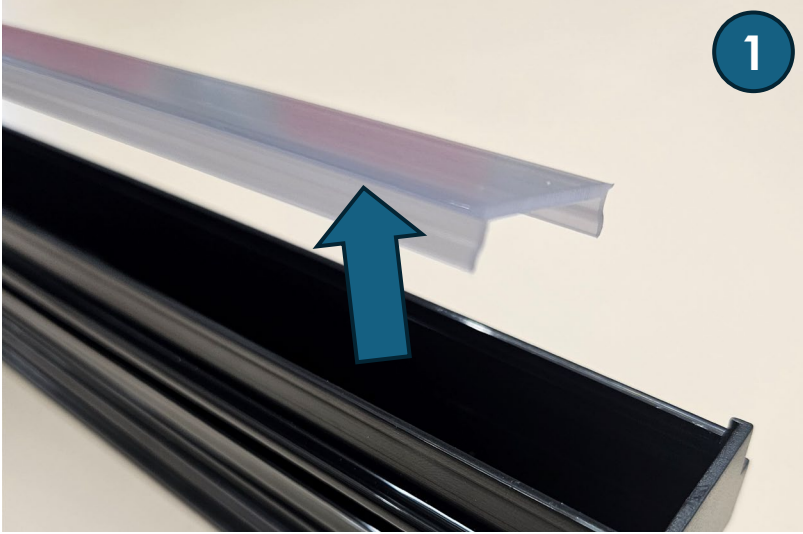

Check that the cable is positioned so that it does not create excessive bulk that pushes the product out of the box.

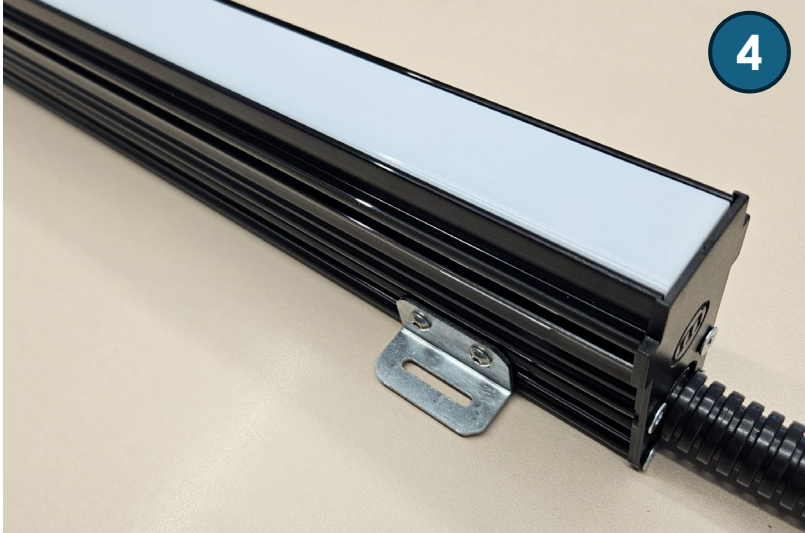

# FIXING TO THE GROUND

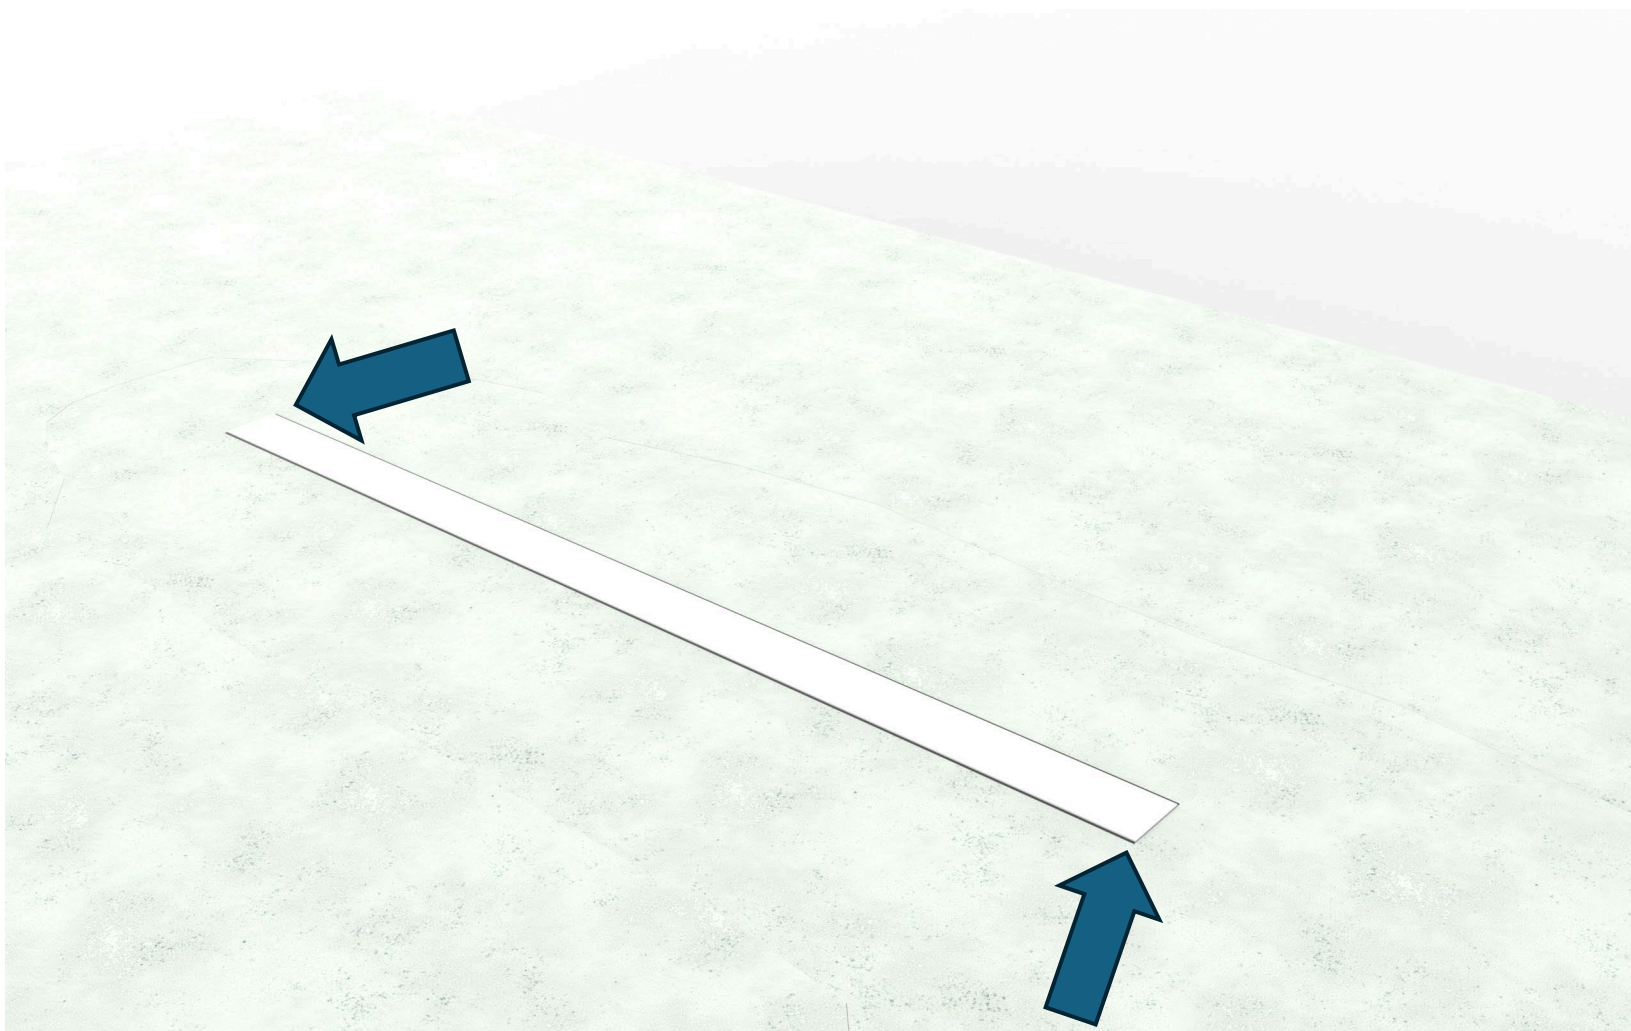

Position the product so that it is perfectly level with the floor.


It should not create steps or tripping hazards.





# DRAINING TUBE

# DRAINING TUBE

In case it is not possible to place drainage material under the boxes.

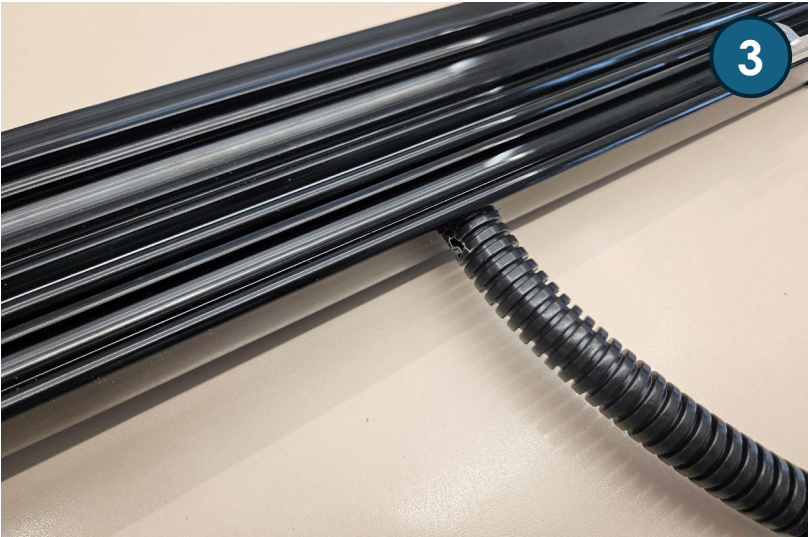

Create a hole in the bottom of the box, in a position where it is easy to reach with a corrugated tube.

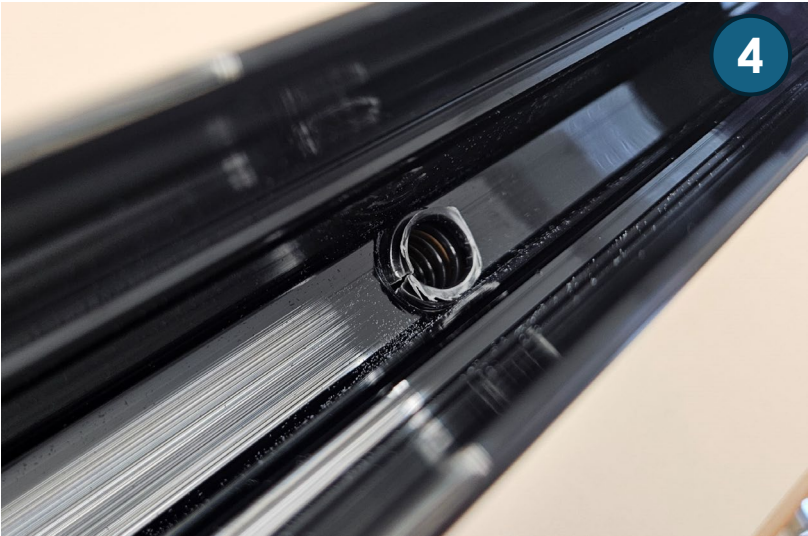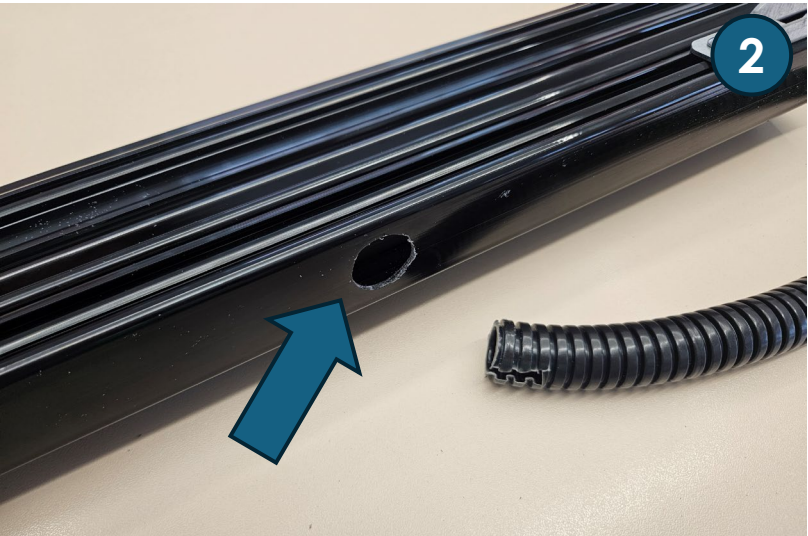



[sales@mizar.it](mailto:sales@mizar.it)

[marketing@mizar.it](mailto:marketing@mizar.it)

[project@mizar.it](mailto:project@mizar.it)